## **GT86-RCNV**

## Instructions:

Print template on A4 paper
Measure diameter
Correct scale and re-print if required
Cutout all dashed lines
Install onto disc + hub
Mark new hole locations
T. Drill new holes

## Adjusting Scale:

 Measure the diameter, lets say it is 145mm
Divide the diameter (150mm) by the measured diameter (145mm) 150 / 145 = 1.0344
Multiply this number by 100 to get the scale % 1.0344 x 100 = 103.44%
Adjust the print settings to print at a scale of 103.44%

\*\*Note that you need to use the number you measured after printing

