



VR30-OPSD

NOTE:


1. REUSE OEM BOLT
2. OIL O-RINGS PRIOR TO INSTALLATION
3. CHECK FOR LEAKS ONCE INSTALLED

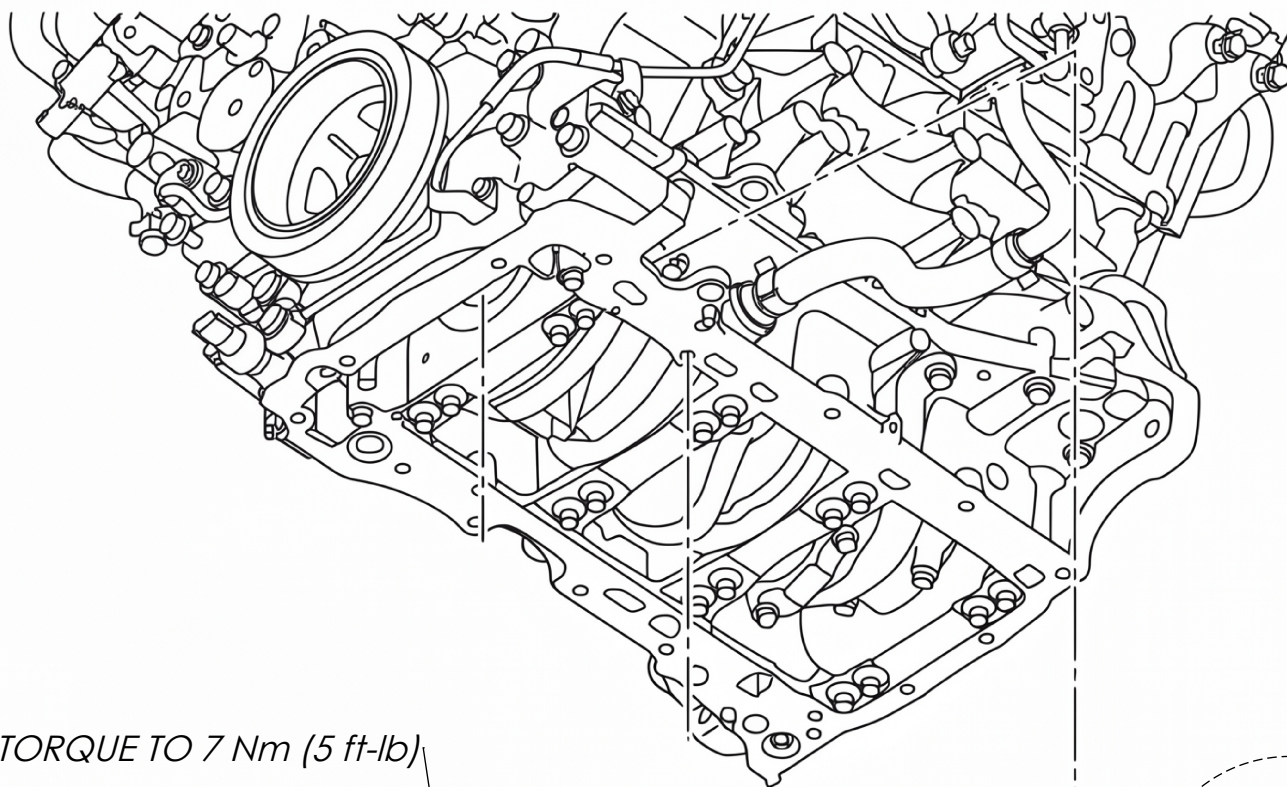

TORQUE TO 7 Nm (5 ft-lb)

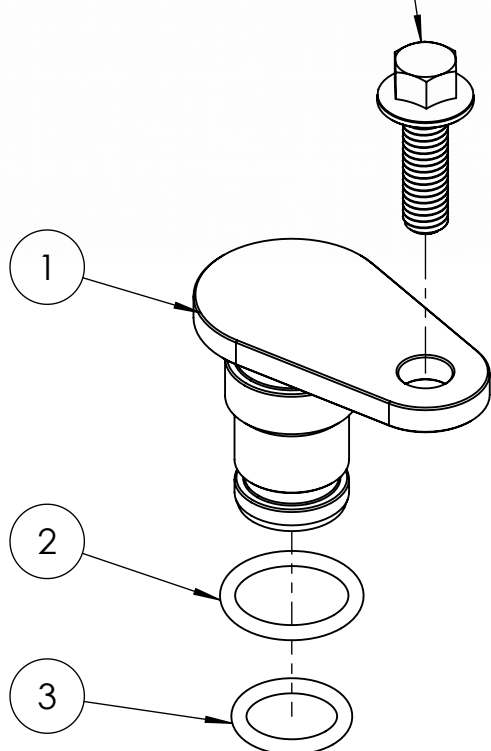

REMOVE OEM
OIL PUMP
SOLENOID AND
REPLACE WITH
VR30-OPSD

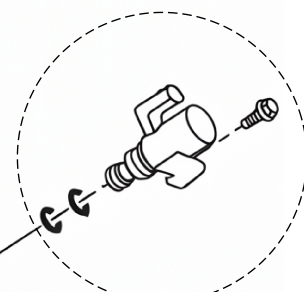

ITEM NO.	DESCRIPTION	QTY.
1	VR30 Oil Pump Solenoid Delete	1
2	Large O-Ring	1
3	Small O-Ring	1