


# Z34X-RMSB

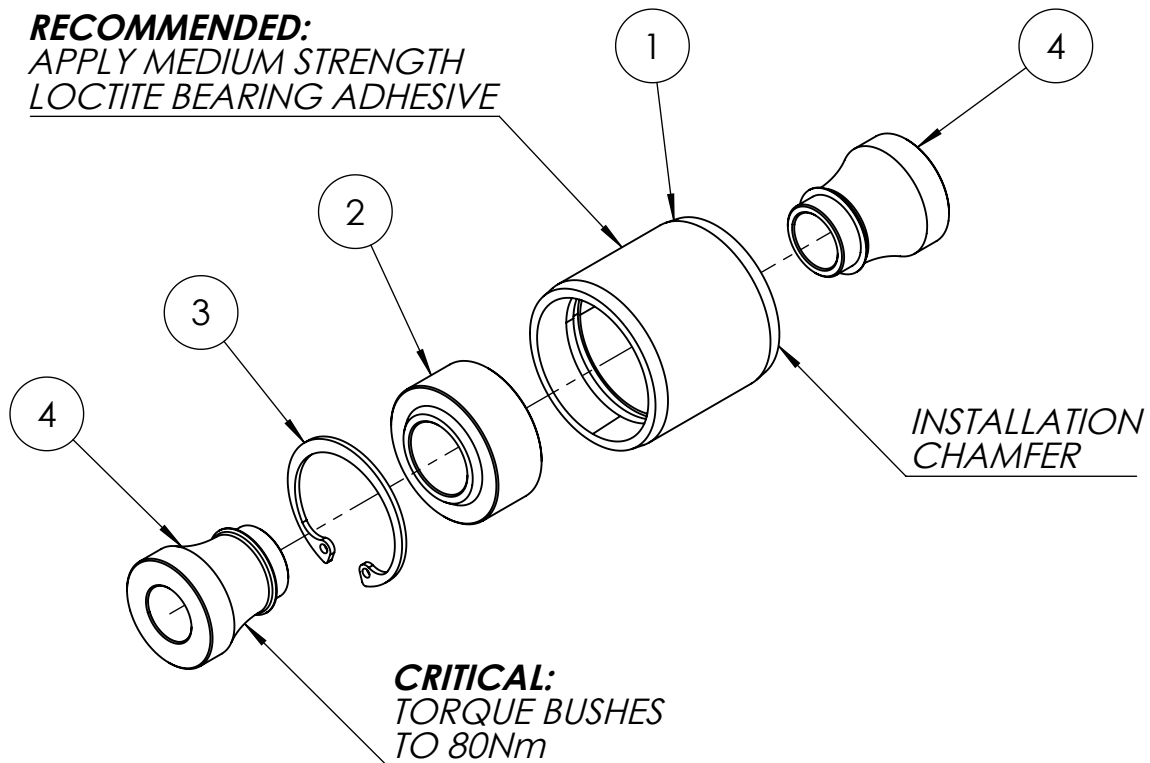

## DIAGRAM A

1. PRESS OUT THE OEM BUSHINGS.
2. APPLY LOCTITE BEARING ADHESIVE.  
(MEDIUM STRENGTH IS SUFFICIENT) \*RECOMMENDED.
3. PRESS IN NEW SPHERICAL BEARINGS USING THE  
INSTALLATION CHAMFER. PRESS THE HOUSING IN BY  
APPLYING FORCE ON THE OUTER EDGE.

ITEM NO.	DESCRIPTION:	QTY:
1	Z34X RMSB HOUSING	1
2	COM10-T SPHERICAL BEARING	1
3	DIN 472, INTERNAL RETAINING RING	1
4	COM10T SPACER 12.2X57.75	2