



GT86-FBSH

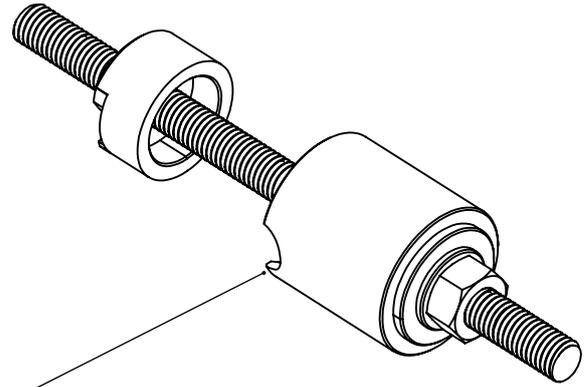


*Recommended to use GKTECH
bush remover / installer
SKU = GT86-FRMV*

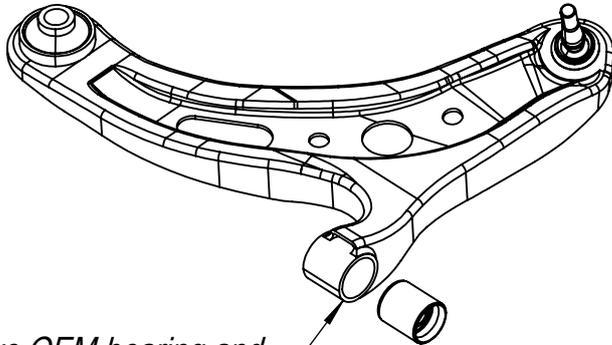

*1. Remove OEM bearing and
sand / clean inner surface*

*2. Install new bearing housing. Ensure to
press only from the outer surface of the
housing and not the inner bearing.*

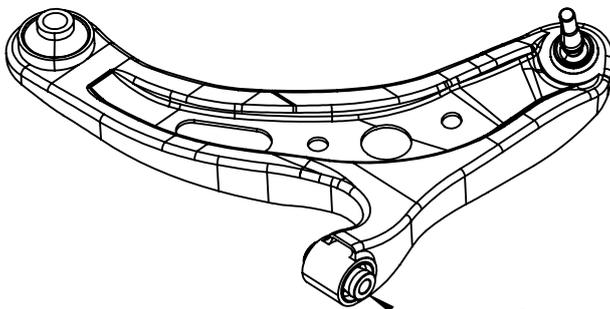

*3. Install spacers then install arm back into car
Tighten and torque to 85Nm (63ft.lbs)*