



Z33/Z34/RZ34 INLINE BUNDLE

1. REMOVE FRONT RIGHT INNER GUARD
2. REMOVE BRAKE FLUID FROM MASTER CYLINDER AND REAR BRAKE LINES
3. UNINSTALL OEM REAR BRAKE BLOCK AND INSTALL INLINE HYDRO DISTRIBUTION BLOCK AS SHOWN IN IMAGE

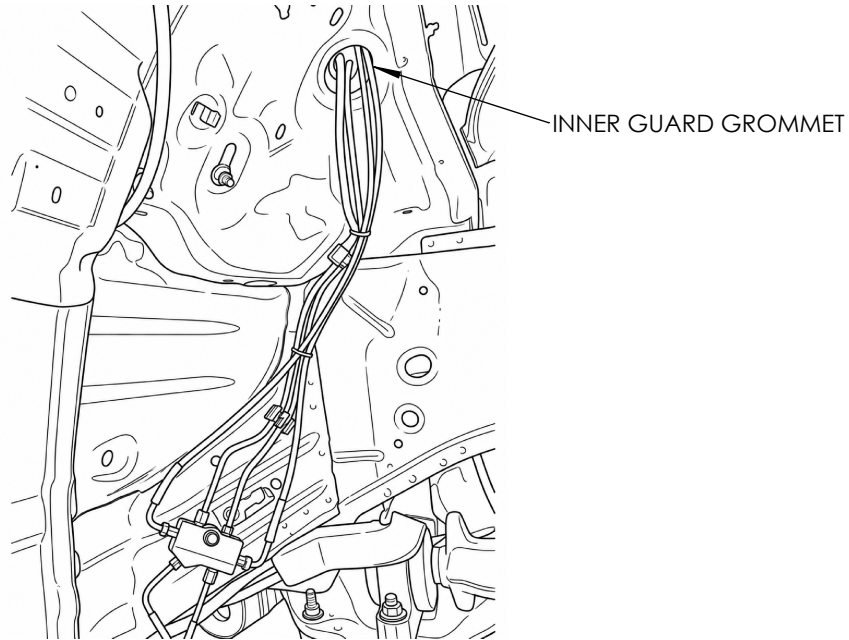


370Z INNER GUARD EXAMPLE

4. LOCATE GROMMET IN FIREWALL (FOR LHD MODELS REMOVE WINDSCREEN COWL)

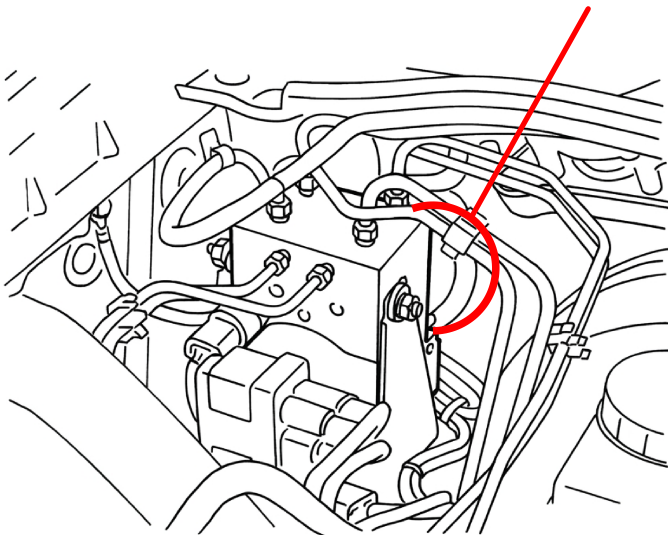


RHD MODELS
FIREWALL GROMMET LOCATED BEHIND ABS
(350Z EXAMPLE)

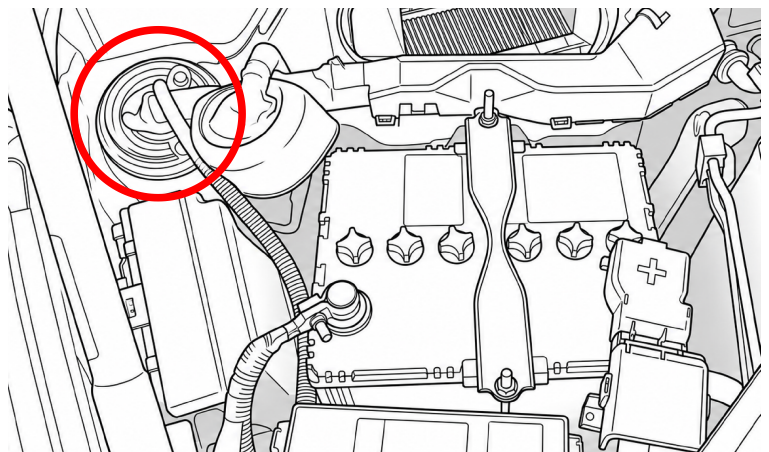

LHD MODELS
FIREWALL GROMMET LOCATED UNDER WINDSCREEN COWL
(370Z EXAMPLE)

Z33/Z34/RZ34 INLINE BUNDLE

5. ROUTE AND INSTALL SUPPLIED BRAKE LINES THROUGH FIREWALL THEN ACROSS TO THE INNER GUARD GROMMET
6. CONNECT LINES TO MASTER CYLINDER AND INLINE HYDRO DISTRIBUTION BLOCK

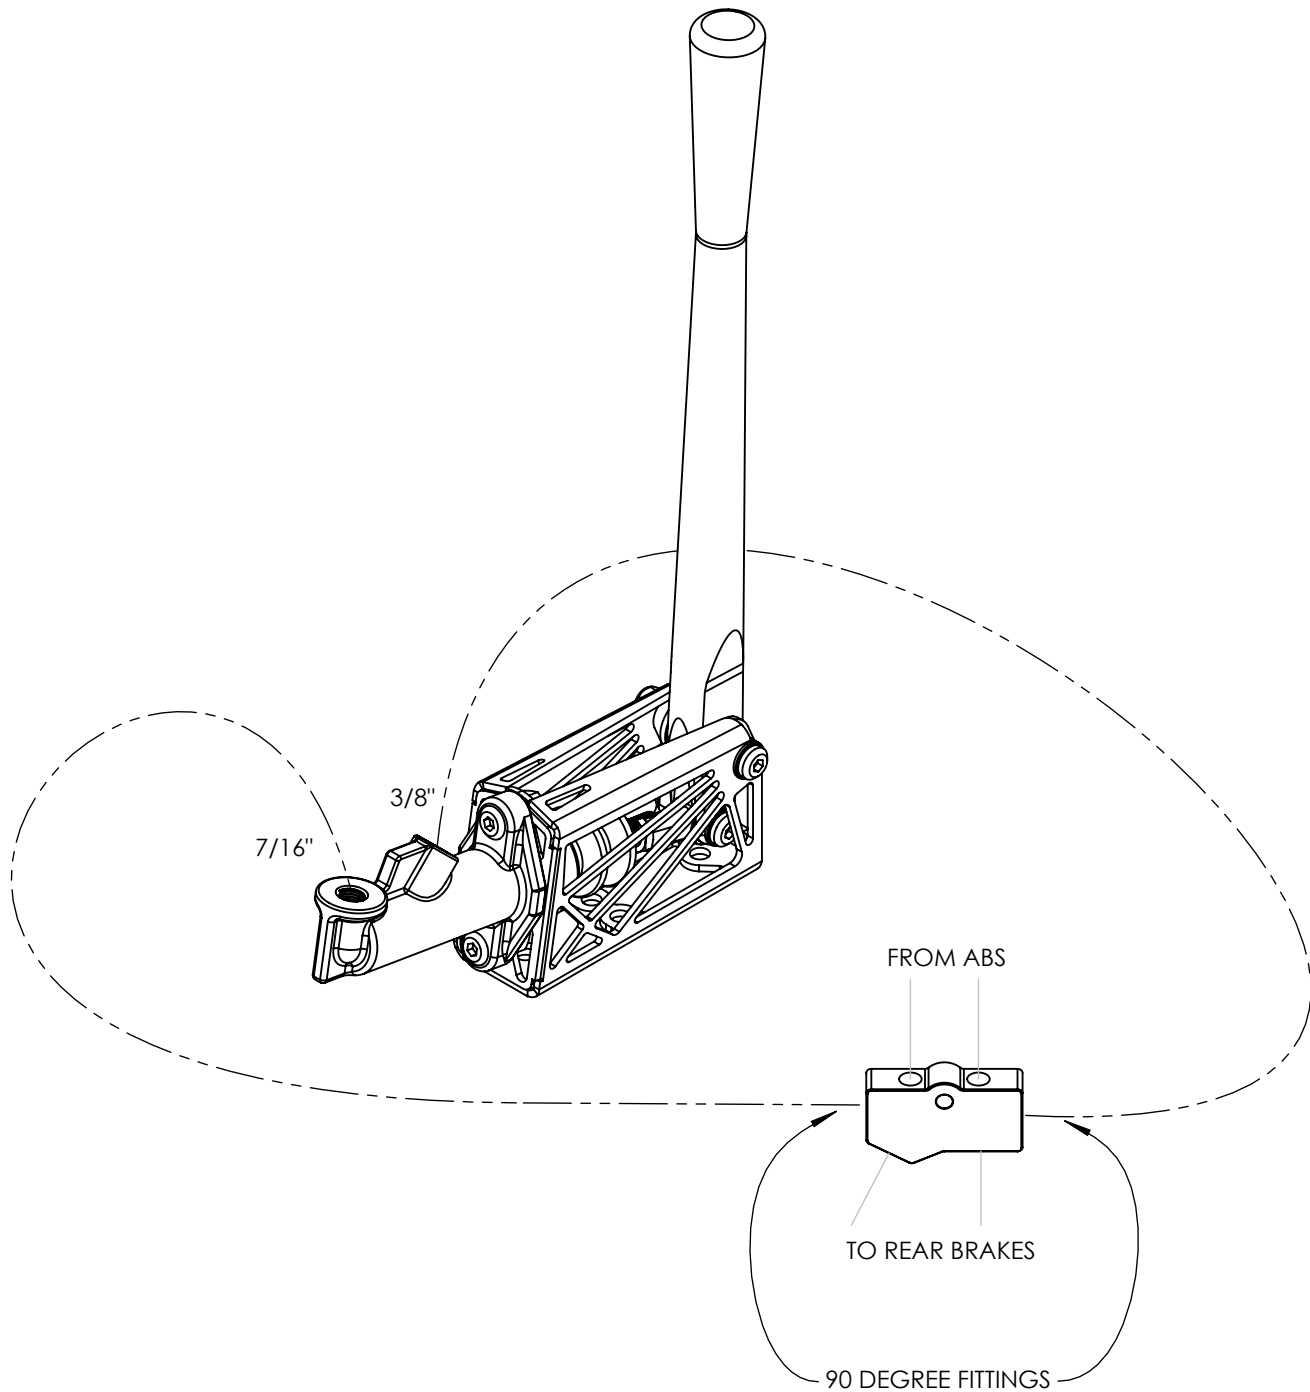

7. BLEED ALL BRAKES (BOTH HANDLE AND FOOT BRAKE TOGETHER). WITH THE CAR ON APPLY MAX BRAKE PRESSURE AND CHECK FOR LEAKS. TIGHTEN ACCORDINGLY
8. REINSTALL FRONT RIGHT INNER GUARD (AND WINDSCREEN COWL FOR LHD)