


**ENSURE TO CHECK CLEARANCE BETWEEN:  
DIFF AND FLOOR PAN  
AXLES AND SUBFRAME  
AXLES AND REAR UPPER ARMS**





**CHECK THROUGH FULL RANGE OF TRAVEL**

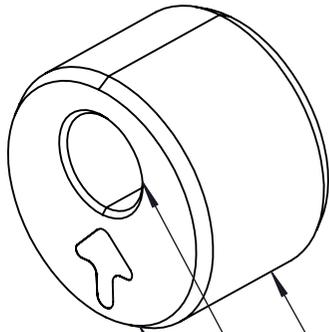

**DIFF BUSH INSTALL TOOL CANNOT BE  
USED DUE TO REAR BUSHING HOLE OFFSET**

**HOLE TO BE CENTERED**

**ARROW TO FACE UPWARDS AND  
BE ON OUTSIDE OF SUBFRAME**

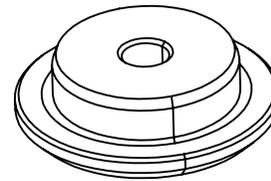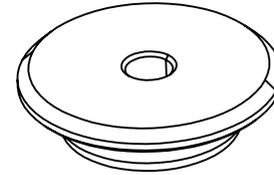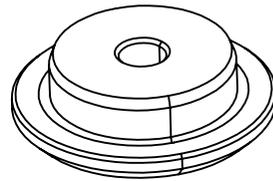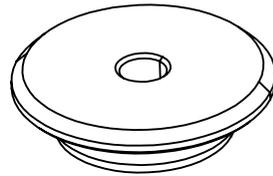

**THINNER BUSHES TO BE INSTALLED ONTOP**

