

Z33X-DLTE

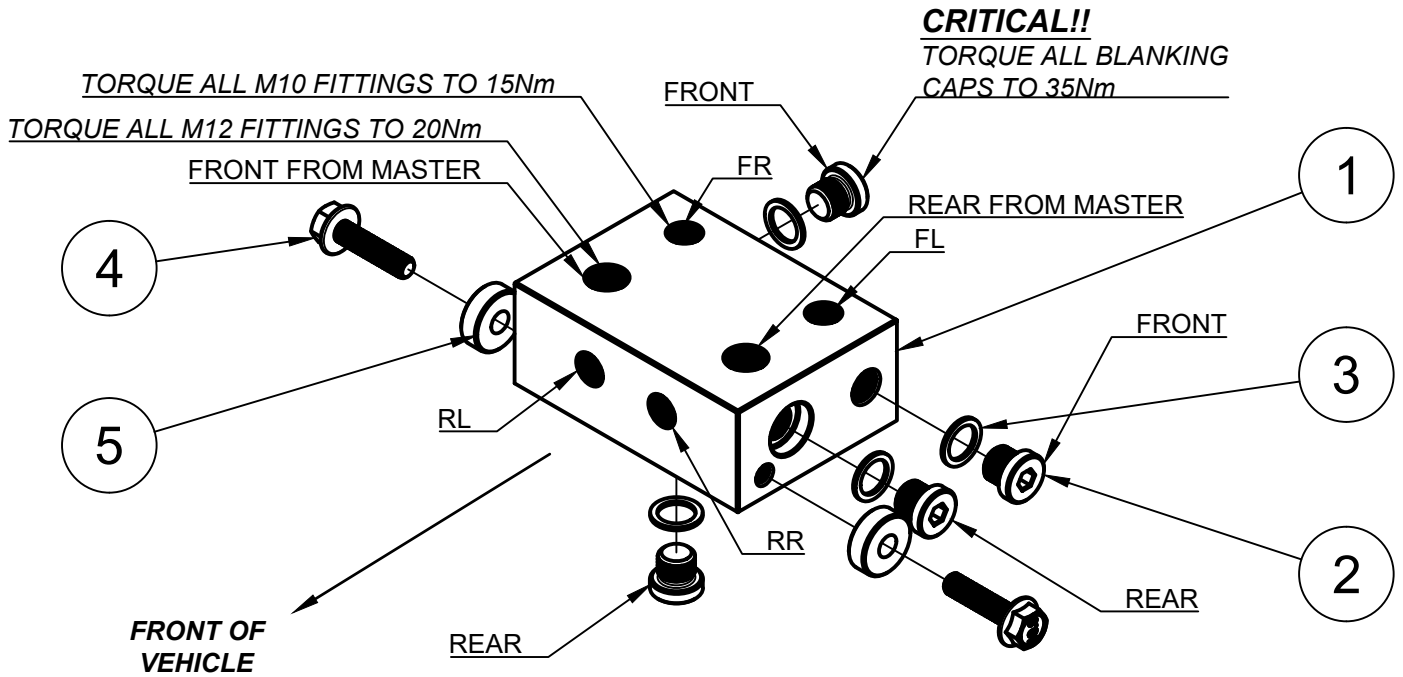


DIAGRAM A

1. UNDO ELECTRONIC CONNECTORS, BRAKE LINES AND MOUNTS TO REMOVE THE OEM ABS ASSEMBLY.
2. TORQUE ALL BLANKING CAPS ON TO THE MANIFOLD BEFORE INSTALLING IN THE VEHICLE.

BLANKING CAPS CAN BE REPLACED WITH M10 x 1 BRAKE PRESSURE SENSORS AS DESIRED. SEE DIAGRAM A FOR DETAILS AS TO WHICH BLANKING CAPS SERVICE THE FRONT OR REAR LINES.

3. USING THE M6 BOLT AND SPACER, INSTALL THE MANIFOLD BLOCK INTO THE OEM ABS MOUNTING BRACKET.
4. ATTACH AND TIGHTEN EACH OF THE BRAKE LINES TO THEIR RESPECTIVE INLET / OUTLET.
5. BLEED VEHICLE BRAKES. APPLY MAXIMUM BRAKE PRESSURE AND CHECK SYSTEM FOR LEAKS, TIGHTEN ACCORDINGLY.

5	M6 SPACER	2
4	M6 x 25 BOLT	2
3	M10 CRUSH WASHER	4
2	M10 x 1 BLANKING CAP	4
1	350Z ABS DELETE MANIFOLD	1
ITEM:	DESCRIPTION:	QTY:
PARTS LIST:		