
Z34X-FBSH

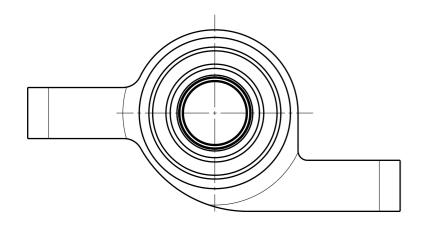

3 1 2 3 1 2 3 1 2

POSITION 1: OEM CASTER

POSITION 2: DECREASE CASTER BY 1° POSITION 3: INCREASE CASTER BY 1°

4. INSTALL BEARING HOUSING AND MOUNT A-ARM ON THE CAR OEM BOLT TORQUE: 88Nm (65 lbs-ft) 3. INSTALL SPACER OVER A-ARM SHAFT MAX GAP FROM SHAFT TO BE 0,3mm (DIAMETER DIFFERENCE) 2. APPLY LOCTITE Loctite 648 BEARING COMPOUND COVERING THE SHAFT 1. REMOVE A-ARM FROM THE CAR. REMOVE OEM REAR MOUNT OUTER HOUSING WITH A BEARING PULLER AND THEN REMOVE INNER SLEEVE SEPARATELY. GRINDER CAN BE USED TO CAREFULLY REMOVE THE OEM MOUNT SLEEVE

