

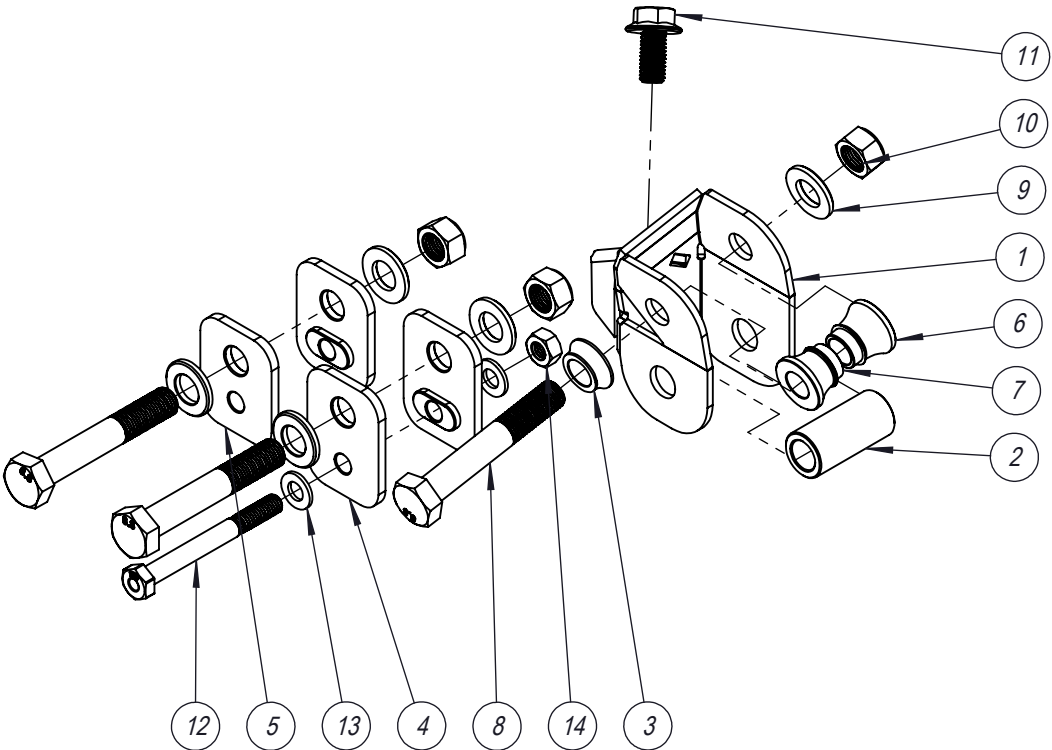




Vehicle Height	Top of guard to wheel center	Traction Arm Length
OEM	375mm	371.50mm
-25mm	350mm	381.50mm
-50mm	325mm	391.50mm

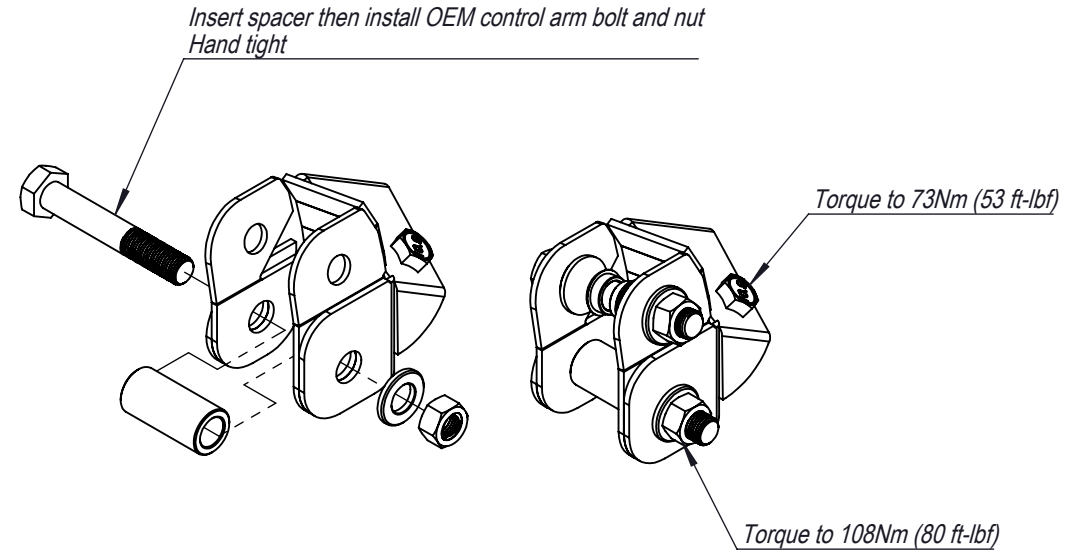



ITEM NO.	DESCRIPTION	QTY.
1	JZX Relocation Bracket ASM R/H	1
2	JZX RUCA Relo Spacer	2
3	JZX Rear Relocation Bolt Spacer	2
4	JZX LCA Relocation Spacer	4
5	JZX Toe Relocation Spacer	4
6	COM10T SPACER 12.2x45.5 - MM	2
7	COM10T SPACER 12.2x42.5 - MM	2
8	Hex Head Screw Partial Thread Grade 10.9	6
9	M12x24x2.5 Washer	10
10	M12x1.25 Spring Stop Locknut	6
11	Black-Phosphate Class 10.9 Steel Screw	2
12	High-Strength Class 10.9 Steel Hex Head Screw	1
13	DIN 125; ISO 7089, Steel Washer	2
14	High-Strength Steel Hex Nut	1
15	JZX Relocation Bracket ASM L/H	1

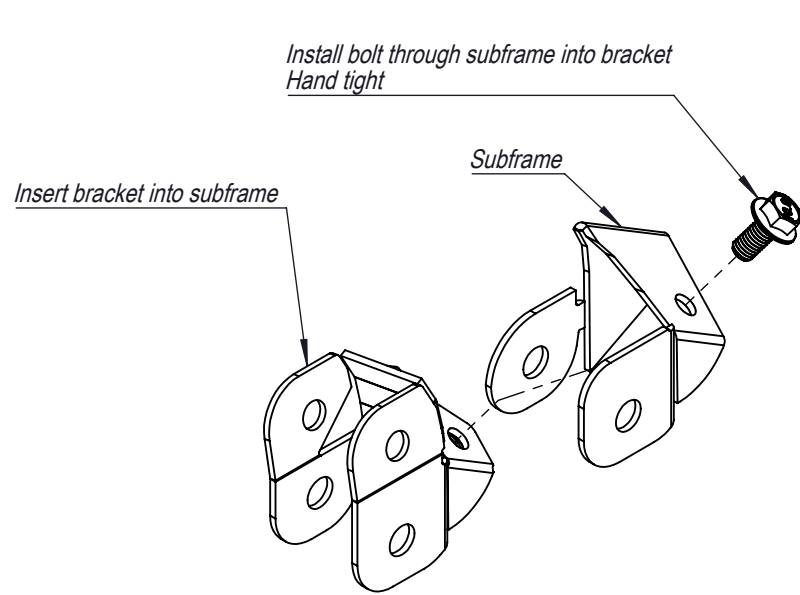

Replace front spacers on GK upper control arm
Larger spacer towards front of car

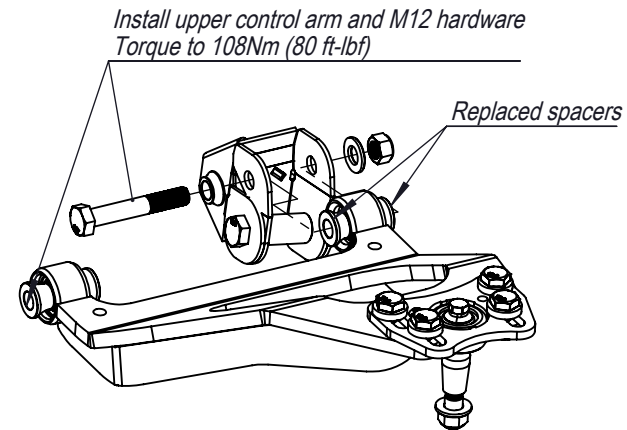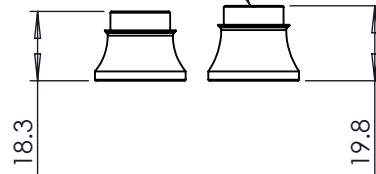

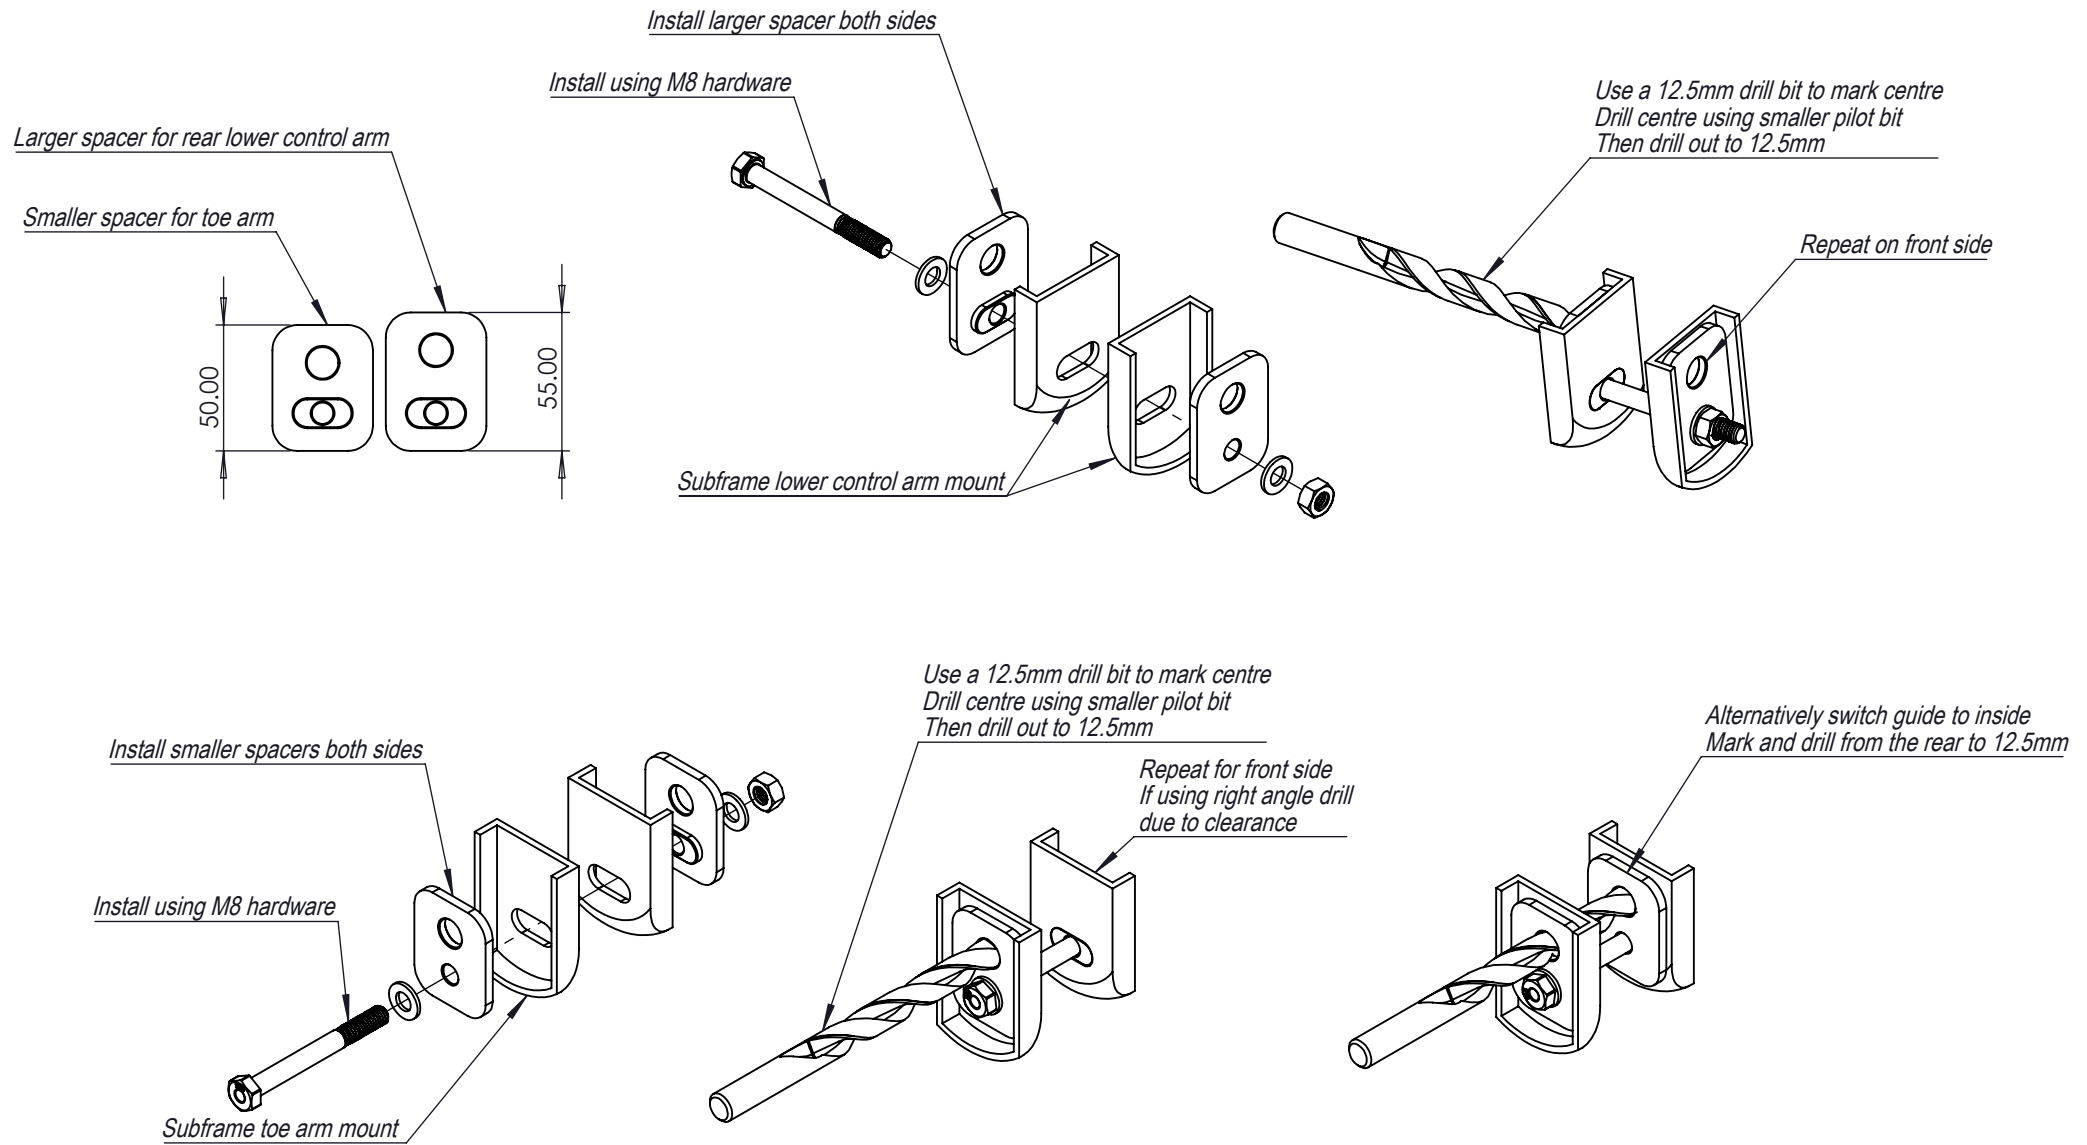

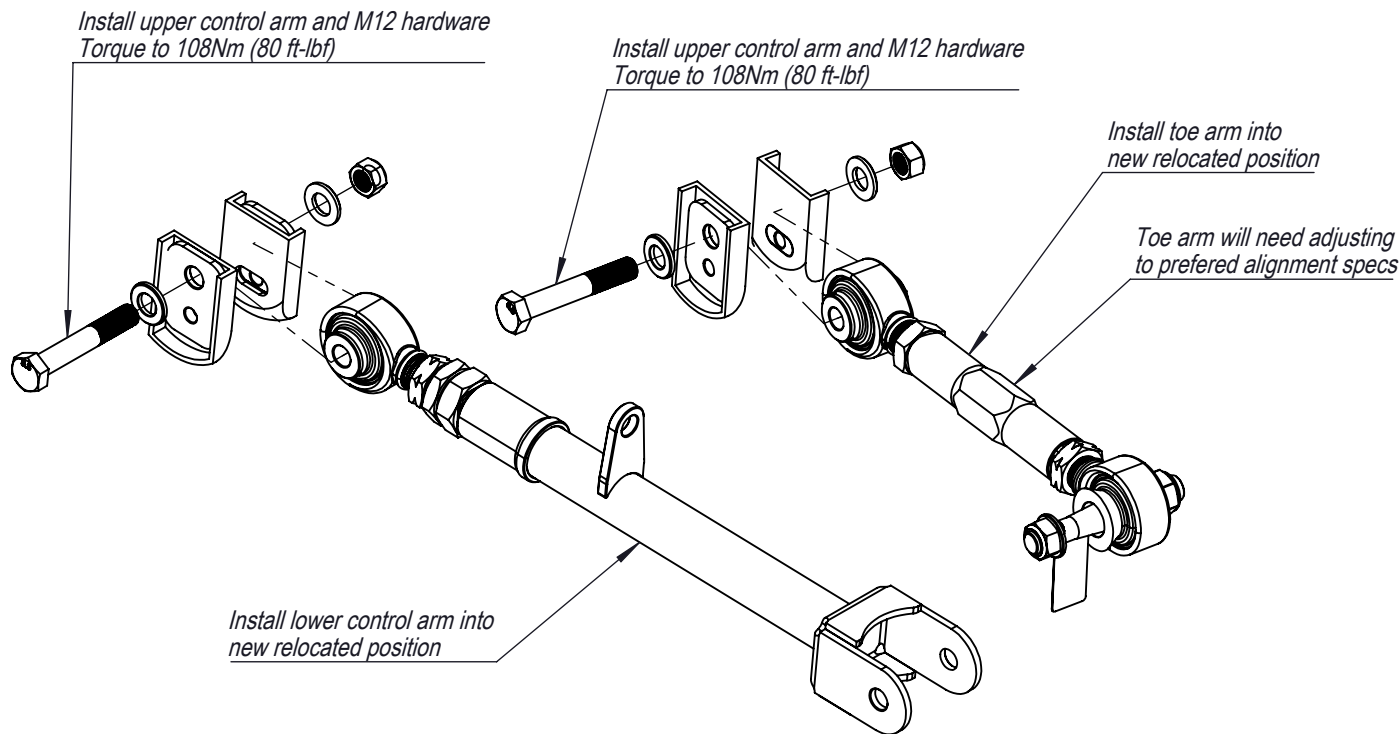

Vehicle Height	Top of guard to wheel center	Traction Arm Length
OEM	375mm	371.50mm
-25mm	350mm	381.50mm (OEM)
-50mm	325mm	391.50mm

Adjust traction arm according to table